

IMPORTANT INSTRUCTIONS

The new Innovative Television Experience is here!

Please follow these directions to program your TV to this new remote control.

This remote control is already pre-programmed to control your Set Top Box (STB). The instructions below will program this remote to control your TV.

- 1 Manually turn **ON** the TV that you want to program to the remote.
- 2 Press and release the **TV** button.
- 3 Press and hold **SETUP** button until the **TV** button blinks twice.
- 4 Press and release the **TV** button. The **TV** button will stay lit.
- 5 Find your TV and brand from the chart below and note the digit key assigned to your brand. Press and hold down the "DIGIT" button for your device/brand while pointing the remote at the TV.
- 6 Let go of the button when your device turns **OFF**.
- 7 Press the **POWER** button to turn your TV **ON**. Press the **STB** button. You are now ready to watch your favorite show!

DIGIT	BRAND
1	Insignia
2	LG
3	Panasonic
4	Philips/Magnavox
5	Samsung
6	Sanyo
7	Sharp
8	Sony
9	Vizio
0	Westinghouse

If you do not see your TV code on the list, follow these instructions:

- 1 Manually turn **ON** the TV that you want to program to the remote.
- 2 Press and release the **TV** button.
- 3 Press and hold **SETUP** button until the **TV** button blinks twice.
- 4 Press 9-9-1.
- 5 Then press **CHANNEL UP** button slowly and repeatedly until your TV turns off.
- 6 Press **SETUP** button.
- 7 Press the **POWER** button to turn your TV **ON**. Press the **STB** button. You are now ready to watch your favorite show!

**If you do not see the Guide once your remote is programmed, you may need an HDMI connection between your set top box and TV.*

If you need additional assistance, please view our video tutorials on Channel 22 or visit our website, **www.vernoncom.coop/support**

If you would like to ecologically and safely dispose of your old remote, please drop them off at our Westby Office.



103 N Main Street • Westby, WI 54667