

CREATE A FAVORITES LIST

If you would like to surf within only a specific set of channels, you can create a Favorites list.

1. Press the **MENU** button to access the Main Menu. Highlight Settings. Use the arrow buttons to highlight Edit Favorites and then press the **OK** button.
2. If you are not already in a 'New List' by default, arrow right to access a New List.
3. Use the **UP/DOWN ARROW** buttons on the remote control to move through the list of channels. When you are on a channel you want to add to your list, press the **OK** button to mark it as part of this Favorites list.
4. To name a list, press the **YELLOW** button on the remote.
5. To save your favorites list, press the **BLUE** button on the remote and then press the **OK** button.

ACCESS A FAVORITES LIST

1. Press the **FAV** button on the remote.
2. All Favorites lists will display. Lists that you have created will display with a star.
3. Arrow down to highlight the Favorites list you want to use and then press the **OK** button.
4. With the favorites list selected, you will browse channels only within that list.

Visit our website for more information and to view tutorials.
www.vernoncom.coop

PURCHASE A NEW VIDEO ON DEMAND

1. Select the **ON DEMAND** button. Select the library that you would like to choose from including: Free On Demand, HD, Movies, New Releases, Ending Soon, or Most Popular.
2. Select the event that you would like to purchase.
3. Select the **RENT** button.
4. The purchase screen will allow you to share the event with the rest of your whole home group before asking for your Purchase Pin. Enter 0000 and select the **RENT** button.

VIEW AND SEARCH CURRENT VIDEO ON DEMAND RENTALS

1. To view your current Video On Demand rentals that are available for viewing, select the **ON DEMAND** button.
2. Select the **GREEN** button on your remote.
3. To search for a specific Video On Demand title, select the **YELLOW** button on your remote. A search library will appear.

WEATHER

The weather app allows the current weather statistics to be viewed.

1. Select the **MENU** button on your remote. Select Apps, highlight Weather, and select the **OK** button
2. To access the Forecast, select the **GREEN** button within the application window.
3. To access the Radar, select the **YELLOW** button within the application window.
4. Once in the Radar screen, select the **BLUE** button to animate the radar and show a looping of current weather conditions.

ROYAL Remote Control Guide



POWER
Turns TV on/off

SET UP
Hold for 3 seconds to enter programming

GUIDE
Displays program guide

ARROW, OK/SELECT
Use to navigate and select menu and guide options

EXIT
Exit current menu and return to current program

VOL +/-
Turns volume up and down

MUTE
Use to turn off volume

LAST
Recall last channel viewed

NUMBER KEYS (0-9)
Allows for direct access to specific channels

TV INPUT
Use to cycle through video inputs on TV

POWER
Turns cable box on/off

MENU
Displays main cable menu

INFO
Displays info for currently selected program
Press again for more detail

FAV
Use to cycle through favorite channels set on your cable box

YELLOW, BLUE, RED, GREEN
Access additional features on your set-top box
Yellow=Apps
Red=Weather
Green=Recent Calls

ON DEMAND
Accesses on demand program library

CHANNEL +/-
Use to tune channel up or down

REWIND, PLAY, FORWARD, STOP, PAUSE, RECORD
Controls playback of live and recorded TV

Closed Captioning
Turns closed captioning on/off



CONTROL LIVE TV

PAUSE

Press the **PAUSE** button and the programming on the screen instantly freezes. Press the **PLAY** button to resume normal play.

REWIND

Press the **REWIND** button. Press it again up to four times to increase the rewind speed: x4, x15, x60, x300. To slow the Rewind speed, press the **FAST FORWARD** button. Press the **PLAY** button to resume normal play.

RESTART

Press the **GUIDE** button. Highlight the program you wish to restart. Press the **GREEN** button to watch from the beginning.

Restart TV is only available on certain channels. It is indicated by the green clock Restart TV icon in front of the channel name in the Guide.



WHAT'S HOT APPLICATION

1. Select the **MENU** button on your remote. Select Apps, highlight What's Hot, and select the **OK** button.
2. A window will appear on the screen with the most current popular channel information for the local area. Press the **RIGHT** and **LEFT ARROW** buttons to view multiple categories. The current What's Hot Channels are indicated by the popularity indicator to the right of the channel name in the guide.

