



Adding the **VernonCom** **Stream** to your **Amazon Fire TV**



To add the VernonCom Stream app to your Amazon Firestick, press the Home button and navigate Left to the search magnifying glass. Type in or use Voice Search to enter VCSTREAM.

Select and click the Get button to download the App. Once the installation is completed, you will be prompted for a Login and Passphrase.

If you haven't received these, please contact our office. After entering the Login and Passphrase press Save and then you are ready to stream.

VernonCom Stream Supported Devices:

- **Stick 4K Max 1st Gen** (K2R2TE)
- **Stick 4K Max 2nd Gen** (K3R6AT)
- **Stick 4K 2nd Gen** (AFTKM)
- **Stick 2nd Gen** (LY73PR)
- **Stick 3rd Gen** (S3L46N)
- **3rd Gen** (LDC9WZ)
- **Cube 2nd Gen** (A78V3N)
- **Cube 3rd Gen** (GA5Z9L)



FireTV Stick HD, FireTV Stick LITE and FireTV Stick 4K 1st Gen are NOT supported and will not work

4K Max and Cube models will provide the best streaming experience

Note: Newer models of the listed devices may work in most cases, but not guaranteed




If you have any questions, please call us at (608) 634-3136

Navigating the **VernonCom** Stream App using **Amazon Fire TV**

Pressing Left, Right, Up or Down on the remote circle selects specific items.

From Home Screen, use the remote to highlight and expand the VernonCom Stream icon and press the center of the remote. This action will open your on-screen Program Guide. To watch a channel, press Up or Down on the remote ring to the program highlighted in blue, press the Play/Pause button to view a currently-airing program.

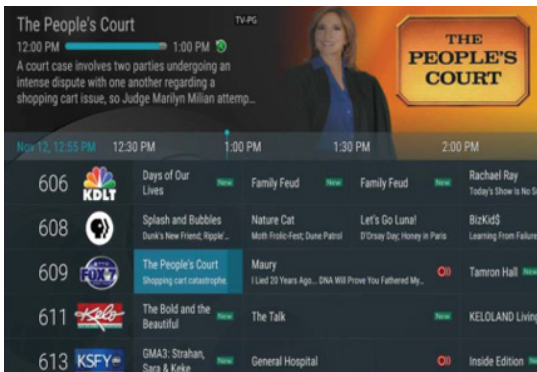


On-Screen Guide Management

From Home Screen, use the remote to highlight and expand the VernonCom Stream icon and press the center of the remote. This action will open your on-screen Program Guide. Press Up, Down, Left or Right to scroll through your channel line-up. Pressing the center of your remote on a highlighted program will open a program screen with detailed information about the program. This screen will also display Watch, Record and Search options.

To Watch, use your remote to highlight the Watch button and press the center of your remote.

To Record a program, highlight the Record button and press in the center of your remote ring. See the Record Your Program section of this guide to learn more about recording programs. Choose the Search feature if you want to see future dates and times that this program will air or programs that have been recorded or scheduled for recording.


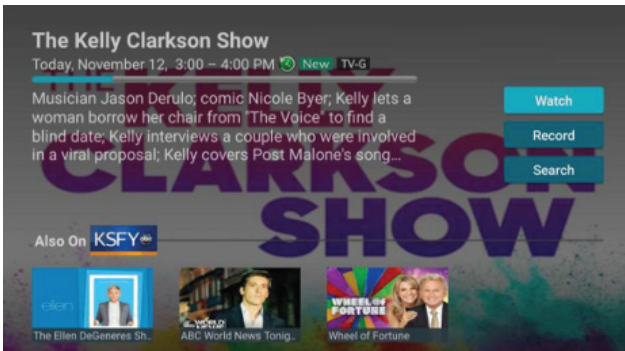


Recording Programs from the Guide

Select an upcoming program, press the center of your remote, highlight the Record button and press the center of your remote to make a recording of this program. See the Recording Your Program section of this guide for recording instructions.


Tab Bar

From the Program Guide, press the Back button on your remote to open the Tab Bar. The Tab Bar allows you to scroll Left or Right to access the Guide, Recordings, Search, and Setting options. Details on the Recording and Search options will be covered in subsequent pages of this guide. The Settings option allows you to add additional devices to your account. Please contact our office if you wish to add more devices.

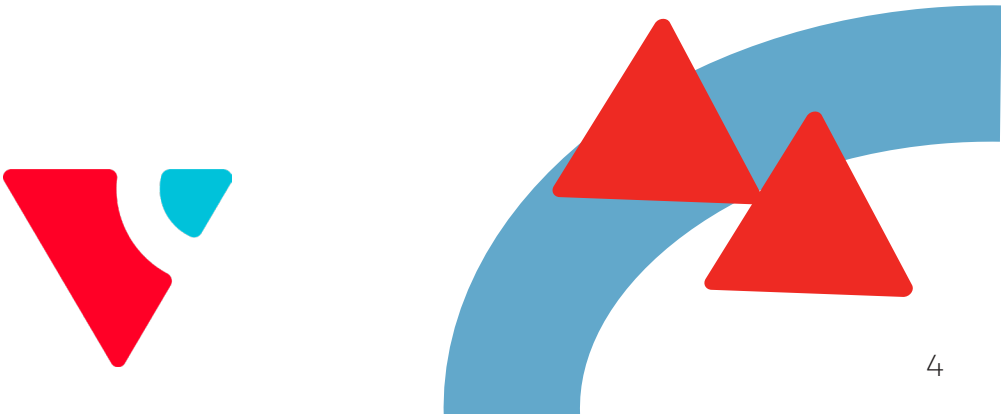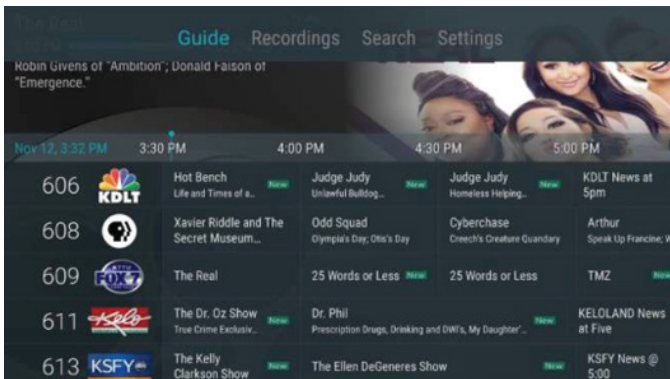


Fast Forward and Rewind Features


There may be times when you want to go back and see that exciting play in the game or fast forward through commercials - don't tell the advertisers. To use this feature during an in-progress or recorded program, press the Fast Forward button on your remote control to advance the program, and press Rewind to go back. The Progress Bar lets you track your movement through a program, and the timer helps you to see how far you are from the end of the program.

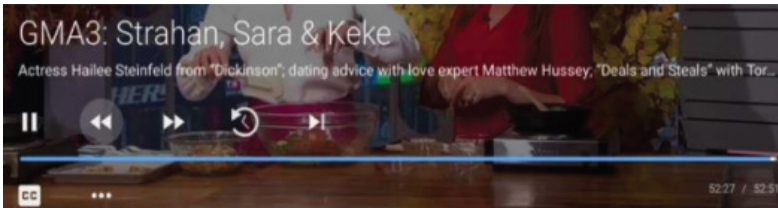


Program Search Feature

You can use the Search feature to find Live, Recorded, and Future programs. From the Program Guide, press the Back button to open the Tab Bar, scroll Right to the Search feature, press on the lower part of the remote ring, and then press the right side of the remote ring to open a typing pad. You can manually type in a program search by typing in letters of a program that you are searching for. To use the Voice Search, press and hold the Microphone button while saying the name of the program you are looking for.

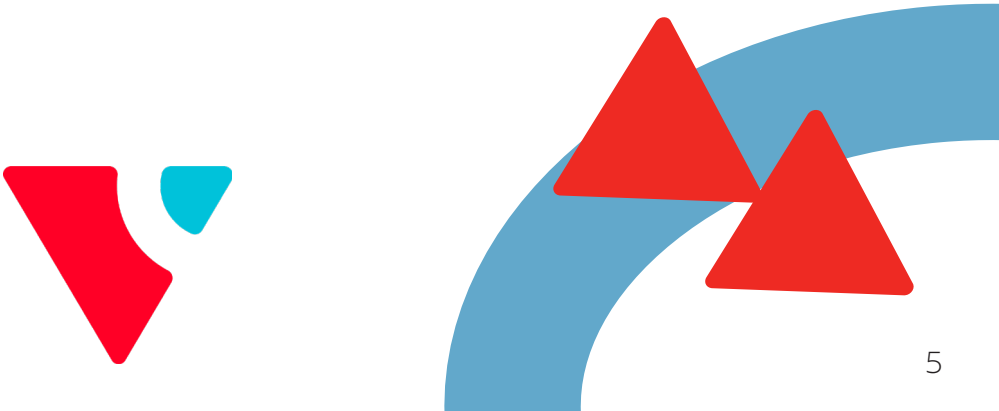

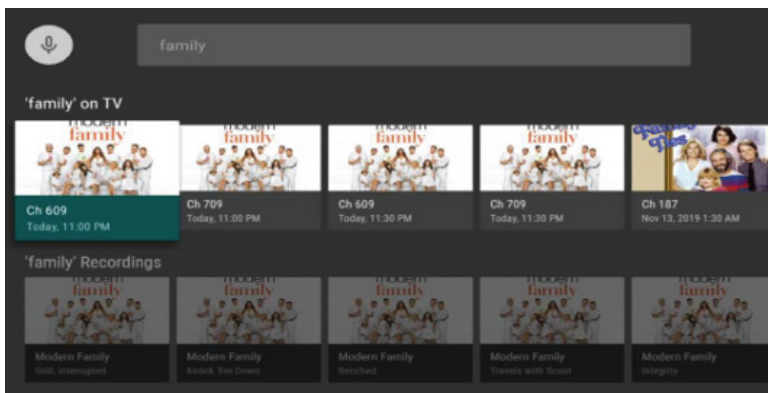


The results will be more specific if you type in or pronounce more letters in the name of the program. You can also use the Search feature to find specific types of programs, like a program with the name "Today" in the title. To view your search results, highlight Next on the keypad and press the center of your remote. The search results will show currently airing or upcoming programs in the top row. Highlight a program, press the center of your remote, and then select Watch to view the program or Record to add this program to your future recordings. The bottom row will show programs that have been recorded or future recordings. Highlight a recorded program you want to watch and press the center of the remote to watch the program. You can also select Delete if you want to remove the program from your recordings.

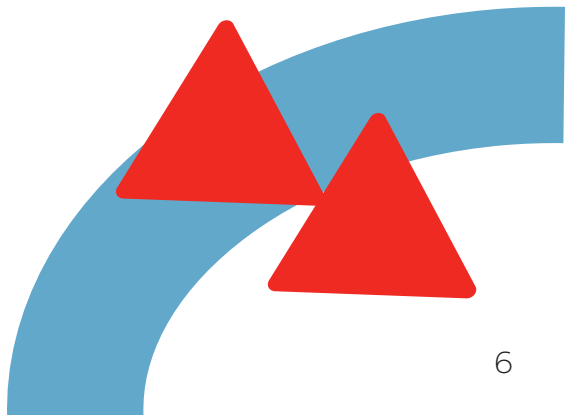

Restart TV

This popular feature lets you go back to the beginning of any currently-airing or in-progress recorded program that has the Restart Option. While watching live TV press on the upper part of the remote ring to open the program Play Bar. Press on the upper part of the remote ring a second time and scroll Right to highlight the Restart button. Press the center of your remote to restart the program from the beginning.

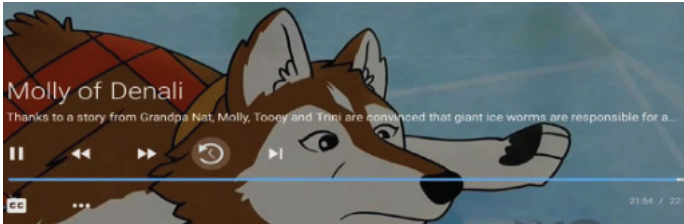

Programs that have the Restart option will display a Green Restart icon in the Guide and program description.

There may be programs because of programming restrictions that don't allow for the Restart function. Please contact our office if you have questions regarding this.

Watching In-Progress Recordings


If you would like to watch an In-Progress recording from the beginning, for the best experience use the Restart feature.




Pause Live TV

Life happens and there may be times when you need to take care of something while watching your favorite program. While watching live TV, press on the Play/Pause button on your remote once to pause the program. After you have left the dog out, raided the refrigerator, or completed any other task, just press the Play/Pause button one more time to continue watching your program.

Quick Guide

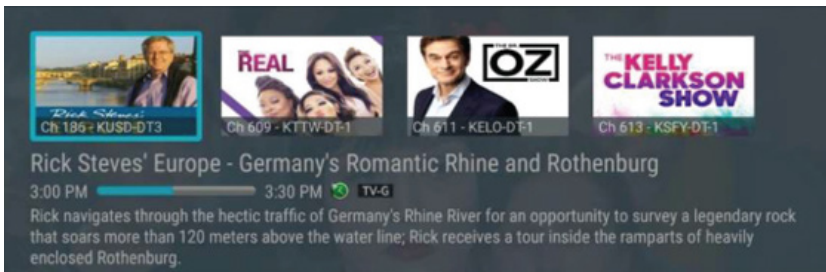

During a recorded or live program press the lower part of the remote control ring to pull down a menu list of your most recently-watched channels. Scroll Left or Right to choose a new channel and press the center of your remote to watch it.

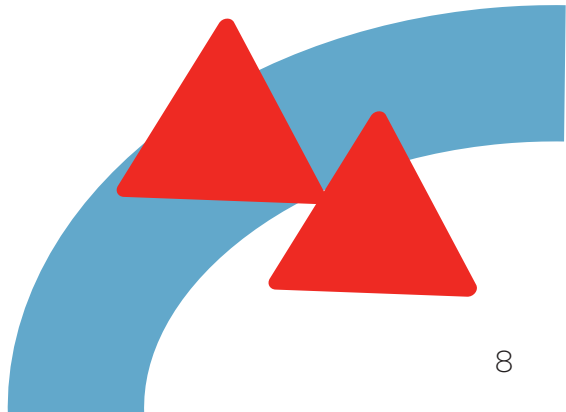


Recording Your Programs

Making a Recording

When you select Record, a screen will display that gives you options for setting a Recording Series rule for this program. You can record only new episodes of this program (Series - New Only), record all episodes of this program (Series - All), or a One-Time recording of this program. To further manage this recording, go to the Tab Bar and select the Recordings options.

Watching Your Recordings

Recordings can be viewed from either the Recordings or Search screen options. Select Recordings from the Tab Bar to open the Recordings screen. Here you will see a list of your Current Recordings. Scroll through the list, highlight the program you want to watch, and press the Play/Pause button to start watching the program

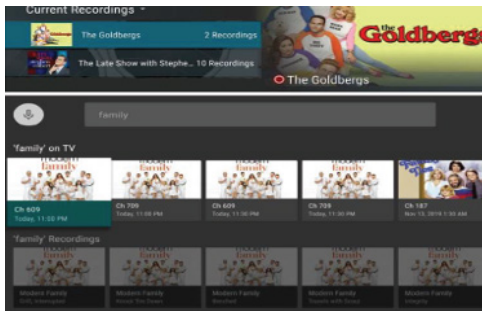


From any of your Search options, you can see a list of recordings for a specific program by highlighting and pressing on the Search button. This screen will display a list of current or future scheduled broadcasts of this program in the top row.


Scroll down to the second row to highlight the list of recorded programs. If the highlighted program has been completely recorded, press the Play/Pause button on your remote to play the recording.

Managing Your Programs

Current Recordings

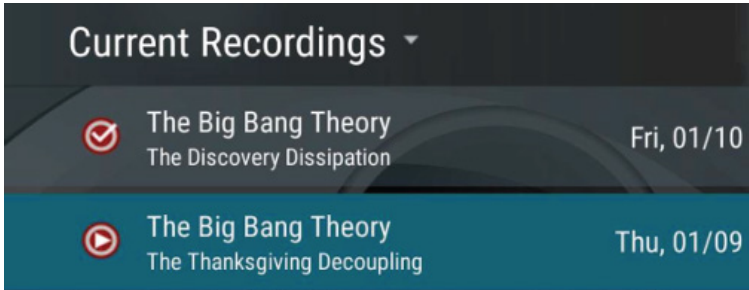


To watch or delete current recordings, go to the Tab Bar and select the Recordings option. This screen will display the list of your recorded programs. Scroll up or down and press on the highlighted program that you want to manage. Scroll up or down to highlight a program and press the Play/Pause button to watch the program. The checked red circle to the left of the program indicates that it has not been watched, while programs with a red play button have been partially-watched. Press Play/Pause on a partially-watched program to view the program where you left off. From this list you can either watch or delete your recorded programs by highlighting the Watch or Delete option. If you choose to Delete a program, you will receive a prompt asking to confirm your deletion.

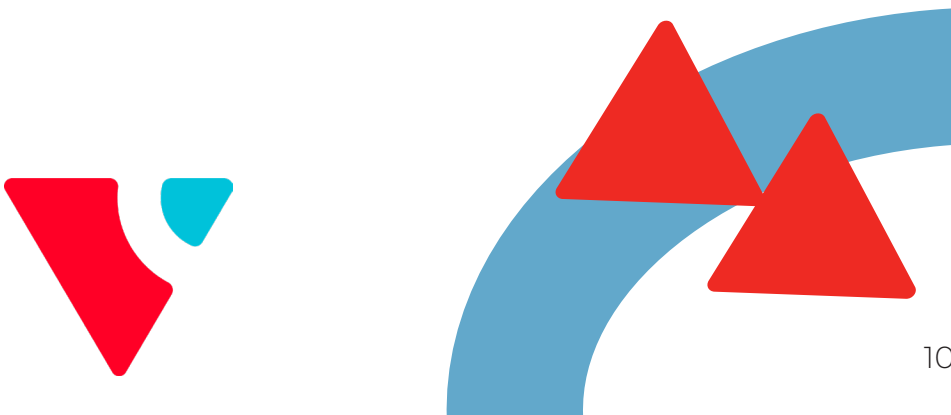




Future Recordings

Use the Future Recordings feature to manage settings for your future recordings. From the Recordings screen, press the center of your remote control twice, and from the dropdown, choose Future Recordings to see a list of programs you have scheduled for recording. Scroll through the list, highlight, and press the center of your remote to open a Future Recording that you want to manage. To ensure that you don't miss the beginning or ending of a program, highlight Edit and press the center of your remote to open a Recording Options screen. Highlight and press the center of your remote to edit the Start and End Recording times for the program. Scroll up or down and press the center of your remote to adjust the time when you want your recordings to start or end. Once you have finished your changes, highlight Save and press the center of your remote to save the changes. To delete a Future Recording, highlight Delete and press the center of your remote, you will receive a prompt asking to confirm your deletion.

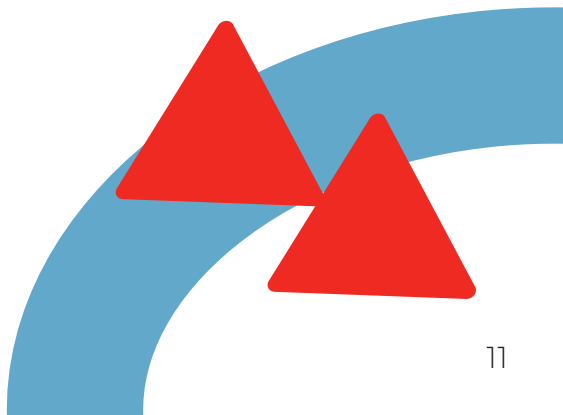

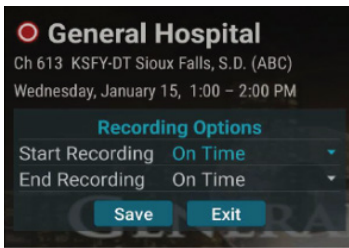

Series Rules

Use the Series Rules feature to manage the episodes of a series that you want recorded automatically. From the Recordings screen, press the center of your remote control twice, and from the dropdown, choose Series Rules to see a list of series programs you have scheduled for recording. Scroll through the list and highlight a series that you want to manage. Highlight Edit and press the center of your remote to open a Recording Options screen. Scroll up or down and press the center of your remote

to choose Recording Type, Keep At Most, Start Recording, or End Recording options. Recording Type lets you keep All Episodes or Only New Episodes. Keep At Most lets you choose a maximum number of episodes that you want to keep of this series, or you can choose to keep All Episodes.

The Start and Stop Recording times option works the same way as it does in Future Recordings. Once you have finished your changes, highlight Save and press the center of your remote control. You can also delete all of the Series Rules for a program by highlighting the Delete button and pressing the center of your remote. This only deletes the Series Rules and does not delete the Series Recordings.