Generating A Code

You will be provided with a code from VernonCom when signing up for service. If you need to add additional devices, a code can be generated on your own.

Follow the instructions to generate a code for a new streaming device:

Fire TV Stick

Open the VernonCom Stream app

Press the *menu button* ⊜ on the remote

Go to *"Settings"* and then choose *"Account"*

Arrow down to *"Add Device"* and press *"OK"*

Apple TV

Open the VernonCom Stream app

Hit the **back arrow** once

At the top of the screen select **"Settings"**

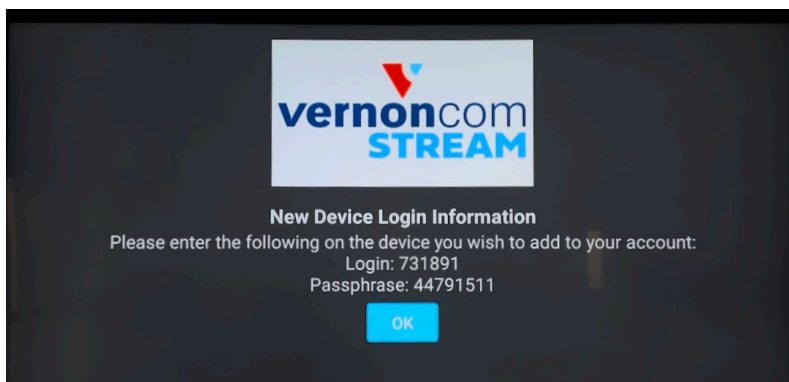Arrow down to **"Devices"** and press **"+"**

Roku

Open the VernonCom Stream app

Hit the **back arrow** one time

Go to **"Settings"**

Go to **"Manage Account"**

Select **"Add Device"**

Fire TV Example

Supported Devices

Fire TV Stick

VernonCom Stream Supported Devices:
- **Stick 4K Max 1st Gen** (K2R2TE)
- **Stick 4K Max 2nd Gen** (K3R6AT)
- **Stick 4K 2nd Gen** (AFTKM)
- **Stick 2nd Gen** (LY73PR)
- **Stick 3rd Gen** (S3L46N)
- **3rd Gen** (LDC9WZ)
- **Cube 2nd Gen** (A78V3N)
- **Cube 3rd Gen** (GA5Z9L)

FireTV Stick HD, FireTV Stick LITE and FireTV Stick 4K 1st Gen are <u>NOT</u> supported and will not work

4K Max and Cube models will provide the best streaming experience

Note: Newer models of the listed devices may work in most cases, but not guaranteed

Apple TV

VernonCom Stream Supported Devices:
- **HD Gen 4** (A1625)
- **4K Gen 3** (A2843)
- **4K Gen 3** (A2737)
- **4K Gen 2** (A2169)
- **4K Gen 1** (A1842)

Apple TV 2nd and 3rd Gen (non-4K versions) are <u>NOT</u> supported and will not work

Roku

VernonCom Stream Supported Devices:
- **Premiere 3920**
- **Streaming Stick 3810**
- **Streaming Stick 4K 3820**
- **Streaming Stick 4K+ 3821**
- **Ultra 4640**
- **Ultra 4660**
- **Ultra 4670**
- **Ultra 4800**
- **Express 3900, 3960, 4K 3940, 4K+ 3941**

***Express models are <u>NOT</u> recommended for the best performance

Streaming Stick 4K and Ultra models will provide the best streaming experience

Note: Newer models of the listed devices may work in most cases, but not guaranteed

Smart TV's with built in Fire TV or Roku TV is NOT supported. While these options may work, performance cannot be quaranteed.

Power

Microphone

Indicator LED

Voice Button

Navigation

Left

Select

Home

Back

Menu

Rewind

Play / Pause

Fast Forward

Mute Button

Guide

Increase Volume

Decrease Volume

APP Buttons * 4

prime VIDeo   NEIFLIX

Disney+   hulu

Fire TV Stick Remote

TV power

Back

Volume controls

OK

Mute

Instant replay

Voice button for voice search and controls

NETFLIX   ESPN+

hulu   sling

Channel shortcut buttons

Roku Remote

Roku

Microphone
for Siri

Power

Touch-enabled
clickpad

Siri

Back

TV/Home

Play/Pause

Volume

Mute

Apple TV Remote

To Jump To Channel...

Roku: Press the * button on your remote when in the Guide
Fire TV: Hold down the center button when in the Guide
Apple TV: Double click center button on your remote

vernoncom